



Master Power Brakes Mopar Adjustable Pushrod Kit P/N: PR4722K

Thanks for your purchase of our Mopar Manual Brakes Adjustable Pushrod Kit. This pushrod is a bolt-on application requiring basic hand tools to install.


Installation Notes:

- Please read all instructions before attempting the installation.
- Proper operation of your brakes is essential for your safety and the safety of others. Any brake service should be performed by a professional technician experienced in the installation of brake systems.
- Any installation requiring you to remove a wheel or gain access under the vehicle requires use of jack stands or a lift appropriate to the weight of the vehicle. In all cases, recommended ratings for jack stands should be at least 2-tons. If using a floor jack, be sure to use the appropriate wheel chocks.
- All installations require proper safety procedures and protective eyewear.

Parts List	
Quantity	Description
1	Adjustable Pushrod
1	3/8"-24 Hex Jam Nut
1	Rubber Grommet

Instructions

1. Insert the Adjustable Pushrod into the master cylinder to test fit the Adjustable Pushrod for proper length to the brake pedal.
2. Adjust the length of the Adjustable Pushrod so that there is 1/4" free play in the relaxed position. This can be accomplished by rotating the 2 halves of the Adjustable Pushrod either in or out until the desired length is achieved. NOTE, it is not necessary to tighten the 3/8"-24 Hex Jam Nut at this time, it will be tightened at a later step.
3. Check to make sure all brake light functions are operating correctly with the current length of the Adjustable Pushrod, If not adjust the length of Adjustable Pushrod until they operate correctly.
4. Once all adjustments are made along with proper functions of the brake lights proceed to tightening the 3/8"-24 Hex Jam Nut
5. Installation is now complete

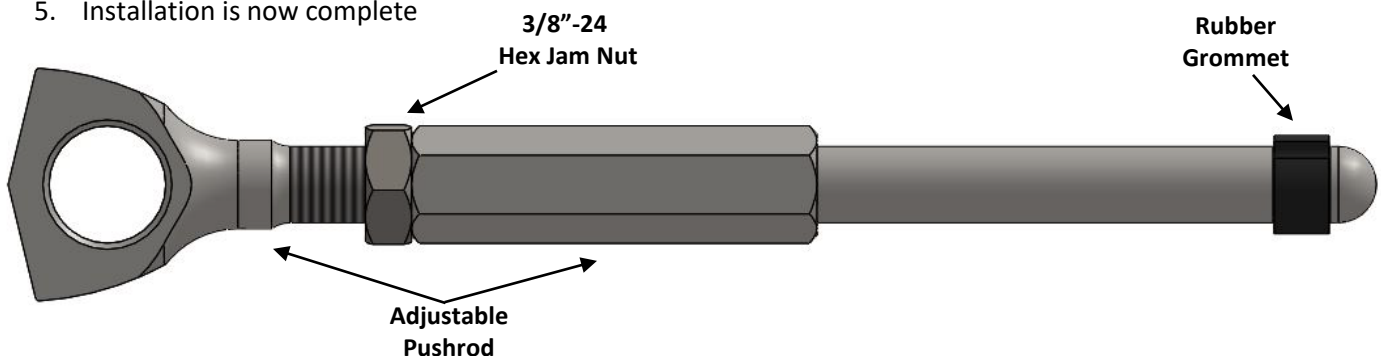

If you have any questions regarding installation, feel free to contact Master Power Brakes at (888) 351-8781 or through our website at www.mpbrakes.com